





MONTAGE / MOUNTING

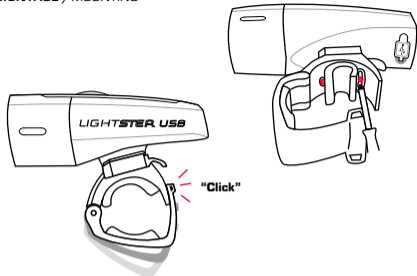

MODI / MODES

 
 


- 1 x click = on / standard 
- + 1 x click = power 
-
- + 1 x click 5 sec. = off 


INDIKATION / INDICATION




Battery control



Achten Sie bitte darauf, dass die rotmarkierte Abdichtung stets korrekt verschlossen ist. / Please always keep the silicone plug closed after charging.

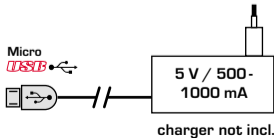

LADEVORGANG / CHARGING

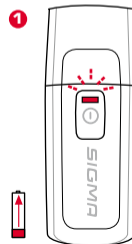

ca. 3,5 h



Art.-Nr. 18552



LADEGERÄT + MICRO USB KABEL
CHARGER + CHARGING CABLE MICRO-USB

Art.-Nr. 18553



MICRO USB KABEL
CHARGING CABLE MICRO-USB

Art.-Nr. 17520



ERSATZHALTERUNG LIGHTSTER USB
MOUNTING LIGHTSTER USB

SIGMA
GERMANY


LIGHTSTER USB

SIGMA-ELEKTRO GmbH

Dr. -Julius-Leber- Straße 15
D-67433 Neustadt / Weinstraße

SIGMA SPORT USA

3487 Swenson Ave.
St. Charles, IL 60174, U.S.A.

SIGMA SPORT ASIA

4 F, No.192, Zhonggong 2nd Rd.,
Xitun Dist., Taichung City 407, Taiwan

